



Graver Technologies

FILTRATION | SEPARATION | PURIFICATION



GFC™ Series Filter Cartridges

Glass Fiber Cartridges

Product Specifications

Media: Borosilicate Microfiberglass
with Acrylic Binder

Inner Core: Polypropylene

Support Layers: Polyester

Cage, End Caps: Polypropylene

Gaskets/O-Rings:

Buna-N, EPDM, Silicone,
Teflon Encapsulated Viton
(O-Rings only), Viton

Micron rating:

0.2, 0.45, 1.0*, 3.0, 10, 30 µm

*1 micron grade features all FDA listed
materials of construction

Dimensions

Nominal lengths:

5"	9.75"	10"	20"	30"	40"
12.7	24.8	25.4	50.8	76.2	101.6 cm

Outside diameter: 2.7" (6.86 cm)

Inside diameter: 1.0" (2.54 cm)

Operating Parameters

**Maximum operating
temperature:** 176°F (80°C)

Maximum differential pressure:

75 psid @ 70°F (5.2 bar @ 21°C)

30 psid @ 176°F (2.0 bar @ 80°C)

Maximum reverse pressure:

40 psid @ 70°F (2.8 bar @ 21°C)

Recommended

change-out pressure:

35 psid (2.4 bar)

This high efficiency, economical filter element is constructed of pleated Borosilicate Microfiberglass media that combines excellent flow rates with exceptional service life. The nominally-rated borosilicate microfiber depth matrix has a natural positive charge that aids in the retention of negatively charged particulates such as colloidal materials or contaminants that may form haze within a fluid. The depth characteristic of glass media also provides enhanced retention of deformable particles as compared to typical polypropylene media. The GFC filter cartridge is an economical solution for both liquids and gases in a wide variety of prefiltration applications.

FEATURES & BENEFITS

- Micron ratings from 0.2 to 30 µm — Broad application range
- Uniform pore size — High removal efficiency
- High surface area — High flow capability and dirt holding capacity
- Long service life — Minimizes maintenance costs
- Fixed pore construction — Eliminates dirt unloading at maximum differential pressure

TYPICAL APPLICATIONS

- Wine prefiltration
- Chemicals
- Blowdown post filter
- Inks
- Oil & Gas
- Serum
- Tissue culture media
- Cutting oils


GFC NOMENCLATURE INFORMATION

Filter Type	Retention Rating (microns)		Nominal Length (inches)		End Configuration	Gasket or O-Ring	Options
GFC Series	0.2	3	-5	-20	P Double Open End	B Buna-N	-I End Cap Insert for Steaming
	0.45	10	-9.75*	-30	P2 226/Flat Single Open End	E EPDM	
	1	30	-10	-40	P3 222/Flat Single Open End	S Silicone	
					P7 226/Fin Single Open End	T Teflon encap. Viton (O-Rings only)	
					P8 222/Fin Single Open End	V Viton	
					AM Single Open End, Internal O-Ring		
					NPC Double Open End, Internal O-Ring		
Example: GFC 3-10P7B-I							
GFC	3		-10		P7	B	-I

*Available only for DOE (P) configuration

GFC FLOW RATE

**Typical Flow Rate Clean Water at Ambient Temperature
(per 10" cartridge)**

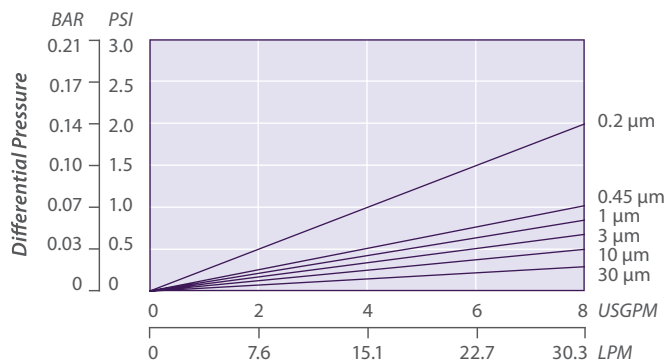

For liquids other than water, multiply pressure drop by the fluid viscosity in centipoise

REMOVAL EFFICIENCY

Beta Ratio Efficiency	Beta 10 90%	Beta 20 95%	Beta 100 99%	Beta 1000 99.9%	Beta 5000 99.98%
0.2 μm	0.2	0.3	0.6	0.8	1.0
0.45 μm	0.45	0.6	0.8	1.8	2.0
1 μm	1.0	1.3	2.0	3.5	4.0
3 μm	3.0	4.0	5.5	9.0	10.0
10 μm	10.0	12.0	15.0	17.0	18.0
30 μm	30.0	35.0	38.0	42.0	45.0

$$\text{Beta Ratio} = \frac{\text{Upstream particle counts}}{\text{Downstream particle counts}}$$

The micron ratings shown at various efficiency and beta ratio value levels were determined through laboratory testing, and can be used as a guide for selecting cartridges and estimating their performance. Under actual field conditions, results may vary somewhat from the values shown due to the test filtration parameters.

Testing was conducted using the single-pass test method, water at 2.5 gpm/10" cartridge. Contaminants included latex beads, coarse and fine test dust. Removal efficiencies were determined using dual laser source particle counters.

FOR MORE INFORMATION

Customer Service/Technical Support: 1-888-353-0303
 Europe (UK): +44-1424-777791 | China: +86-21-5238-6576
 Asia: +65-9635-7690

GTX-263 10-16



All information and recommendations appearing in this bulletin concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Graver Technologies as to the effects of such use or the results to be obtained. Graver Technologies assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations. GFC is a trademark of Graver Technologies, LLC.

DISTRIBUTED BY

TCW

EQUIPMENT

707-963-9681 • info@tcwequipment.com



Graver Technologies | 200 Lake Drive, Glasgow, DE 19702 | 302-731-1700 | 800-249-1990
 Fax: 1-302-369-0938 | info@gravertech.com | www.gravertech.com

A member of The Marmon Group—A Berkshire Hathaway Company